



Cricut One Color Vinyl Projects

Step By Step Instructions Part 3 of 4


Make It

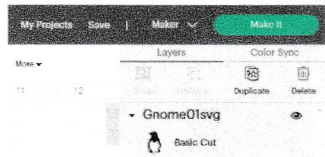

1. Back to Cricut Design Space. Your design is all resize and your ready to cut. At the top right hand corner there is a button that says Make It. Push that.

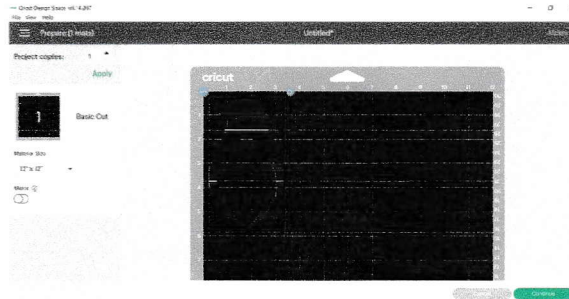

2 This screen shows you where on the mat the cricut is going to cut your image. I usually bring it down just 1/4" so it's not cutting right on the edge.

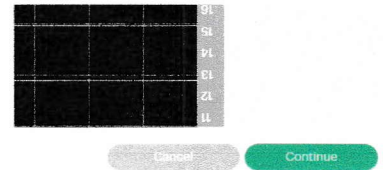

3. Push the Continue Button


4 Set Base Material

Popular	Search All Materials
<ul style="list-style-type: none"> Medium Cardstock - 80" (75 gsm) Light Cardstock - 65 lb (75 gsm) Heavy Fabrics (Like Denim) Transfer Sheet 	<ul style="list-style-type: none"> Red Board Foil Poster Board Copy Paper - 20 lb (75 gsm) Vinyl Everyday Iron-On Fabric Cotton Felt Faux Leather (Paper Thin)


4. Now the Cricut wants to know what material you are cutting. Click on the Search All Materials Link and search for vinyl. Click on that. The Cricut will tell you what type of blade you need for that material. Fine-Point Blade.




5. Fine-Point Blade. This is the standard blade that probably came with your cricut.

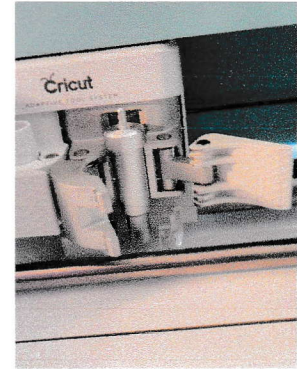


6. To insert it open the arms of the one on the right side. Insert it so the depressor is up. (The pointy part, when you push on this the blade comes down).

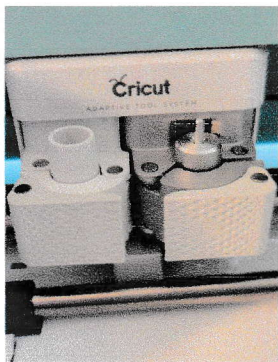


7. Close the arms. DO NOT force them closed if they don't close reposition the blade a little and try again

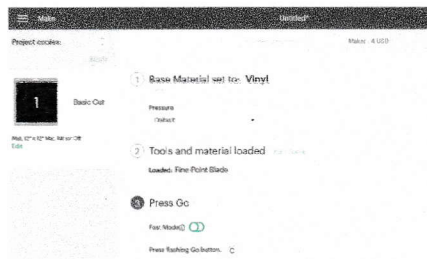

8. Your ready to Make It. Side Note: Notice under the category Base Material set to: It says Pressure ... Default There is a pull down menu there that will let you add more or less pressure to the cut. Granted your not going to know this til after it's printed, But if you are having problems with it cutting through the backing or not cutting through the vinyl this is where you can fix it.

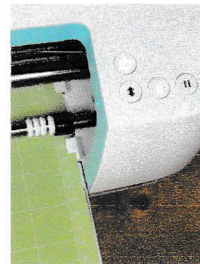

9. On the Cricut the button with the Cricket Logo should be flashing. If it's not usually you either have the wrong blade or your mat isn't loaded. Push the Flashing Button and your cutting will begin.

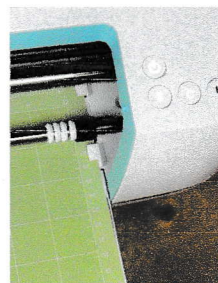

10. Design Space will tell you when it's done. PUSH THE UNLOAD BUTTON on the Cricut (The one with the up and down arrows) and remove your design.

